

USER GUIDE

www.fiberopticlink.com

UG-M009 2025-02-25

DIN Rail Housing

Securely House DIN Rail Equipment in Rack Mount Environments

The DIN Rail Housing is designed to safely and securely house DIN rail mounted equipment for wall and rack mount applications. The industrial housing is a steel, powder coated, enclosure with a hinged transparent door for quick assessment of the equipment status and configuration. Access to the inside is easy and secure with a quarter turn latch. An optional key locking latch is also available.

Inside is a 15.8" section of standard 35mm DIN rail for mounting equipment. Multiple cable openings on the sides and bottom allow for flexible cable routing, and plastic cable guides are provided to manage copper and fiber cables into and out of the housing.

The housing may be ordered pre-configured with a 150 Watt AC/DC Power Supply system for either 24VDC or 48VDC applications. The power supply is pre-mounted on the DIN rail pre-wired with a breaker, terminal blocks, and a six foot AC pigtail power cord. Approximately 9.5 inches of DIN rail space is available after power system is installed.



DIN Rail Housing

Key Features

- EIA 19/23" rack or wall mount (hardware included)
- Durable powder coated steel construction
- Quarter turn access latch or key locking latch option
- Multiple cable entry and exit points for flexible routing
- Front, side and rear vents
- Hinged door with acrylic window to monitor equipment
- 15.8" of usable DIN rail space inside
- Available with an integrated AC/DC 150 Watt Powering System (24VDC or 48VDC options)
- Made in USA

 
Ordering Information

Description	Part Number
DIN Rail Housing, Rack and Wall Mountable	DRH-N-1
DIN Rail Housing, Rack and Wall Mountable, with 150 Watt 24VDC Power Supply Kit	DRH-N-24-1
DIN Rail Housing, Rack and Wall Mountable, with 150 Watt 48VDC Power Supply Kit	DRH-N-48-1
DIN Rail Housing, Rack and Wall Mountable, with Key Lock	DRH-S-1
DIN Rail Housing, Rack and Wall Mountable, with Key Lock and 150 Watt 24VDC Power Supply Kit	DRH-S-24-1
DIN Rail Housing, Rack and Wall Mountable, with Key Lock and 150 Watt 48VDC Power Supply Kit	DRH-S-48-1

USER GUIDE

www.fiberopticlink.com

Dimensions

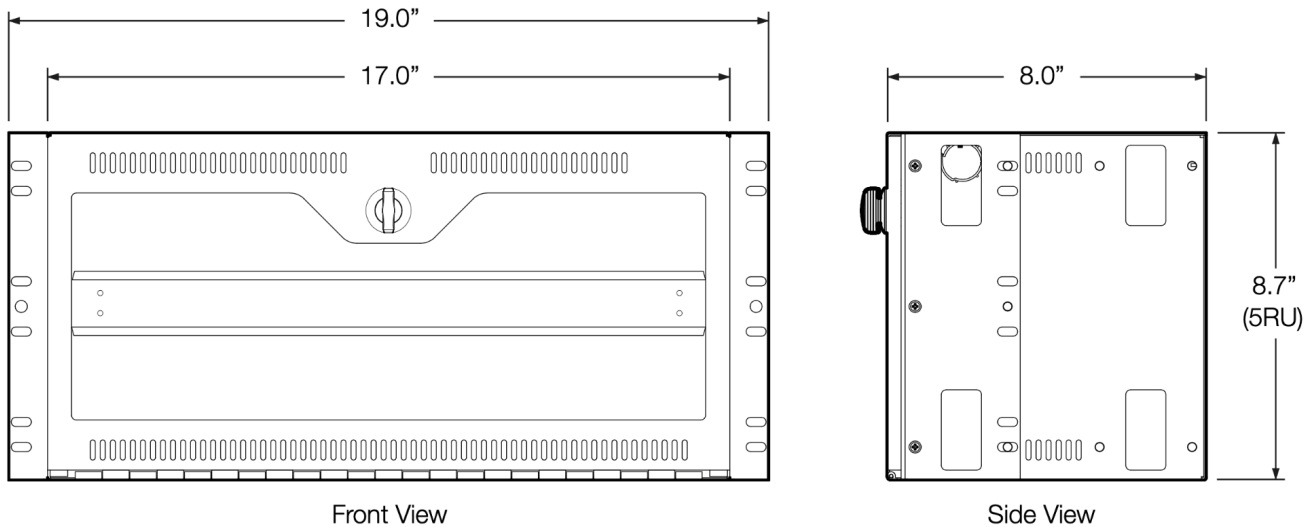


Installation

Prior to installation:

- Check for shipping damage
- Check the contents to ensure correct model and power options
- Have a clean, dry, rack or wall installation environment ready

Universal Mounting Brackets

 The housing includes (2) two universal mounting brackets and attaching hardware allowing the flexibility to fit into multiple application locations. Below shows the different attaching points for mounting the universal brackets to the housing.

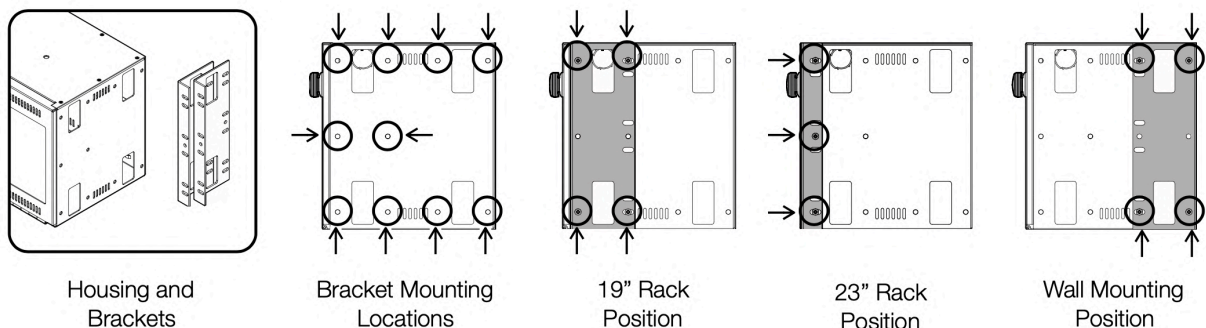


Universal Mounting Bracket Positions

Installation (cont'd)


Rack Mounting

Install the universal mounting brackets on the sides at the front for standard equipment racks, or half way back for telco style rack mounting. For 23" rack applications, rotate the universal mounting brackets so the shorter end sits flat on the side of the housing before installing into the rack.

 Rack mount hardware is included with the housing. Cables may be routed through the rectangle entry and exit points on the sides, back and bottom of the housing.

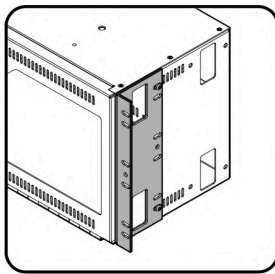


19" Rack Position

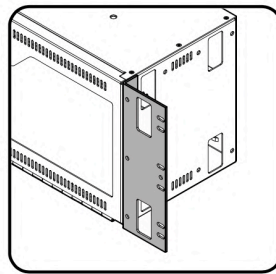 


23" Rack Position

 Standard Rack Mounting

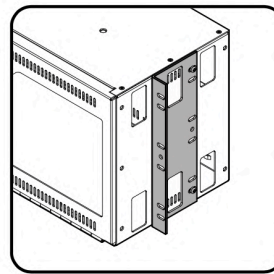

19" Rack Position

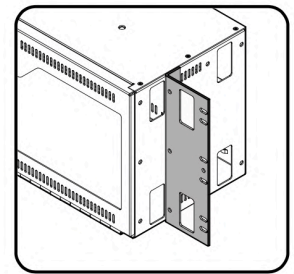 


23" Rack Position

Telco Rack Mounting


Wall Mounting

Install the universal mounting brackets on the sides at the back of the housing. For wall mounting to wood backboard, use the included screws and flat washers. For all other mounting surfaces, use appropriate mounting hardware as required.

 When installing, choose a location protected from the elements, and make sure there is sufficient room for the front door to open fully. Consider access to AC power, fiber cables, backup batteries and any other connections as required when installing.

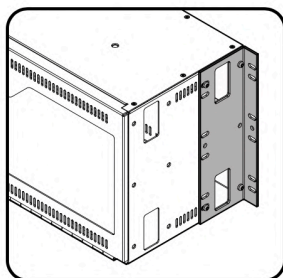

Wall Mounting
Position

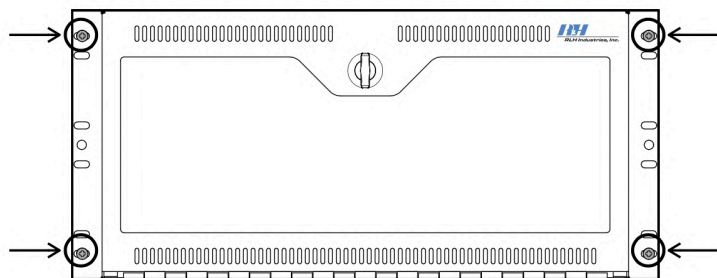 

Front View

Wall Mounting

USER GUIDE

 
www.fiberopticlink.com

Installation (cont'd)

Rack Mounting

The housing may be ordered preconfigured with a 150 Watt AC/DC power supply system for either 24VDC or 48VDC applications. The power supply is pre-mounted on the DIN rail prewired with a breaker, terminal blocks, and a six foot AC pigtail power cord. Plug the 6 ft. AC power cord into a standard 110V AC receptacle to apply power.

Note: The DC power outputs are live when AC or DC input power is present.

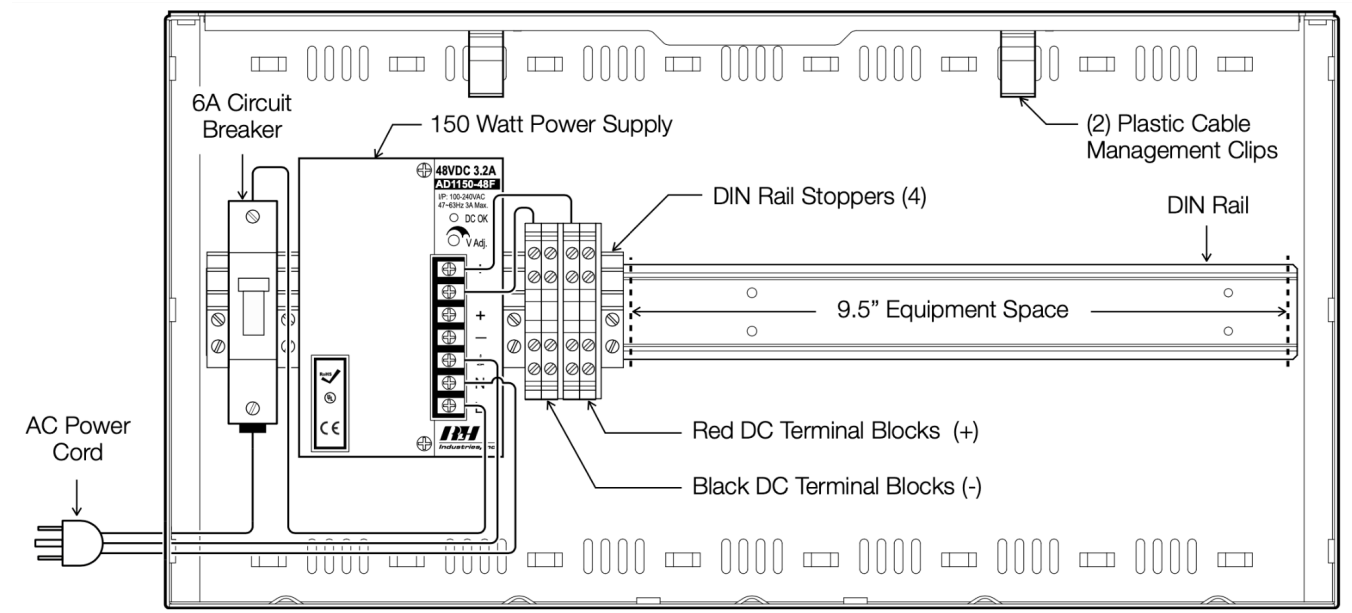

Internal View of Preconfigured AC/DC Power System

Housing Specifications

Construction:	Powder coated steel, standard 35mm DIN-rail, acrylic door, and (2) plastic cable guides
Dimensions:	5RU - 17" (W) x 8" (D) x 8.7" (H), (432mm x 203mm x 221mm) (Mounting Space 15.8" of DIN rail space, 9.5" when ordered with integrated power supply)
Included in Empty Housing:	Universal mounting brackets (19/23" rack / wall) and attaching hardware(keys for key locking latch option
Included with Power System:	150 Watt AC/DC power supply, 6A Circuit Breaker, (2) red DC terminal blocks, (2) black DC terminal blocks, (4) DIN rail stoppers, 16AWG Wiring, 6 ft. AC power cord

USER GUIDE

www.fiberopticlink.com

AC/DC Power Specifications

		24VDC (RD1150-24F)	48VDC (RD1150-48F)
Input:	Voltage Range	Nominal 100 – 240VAC, 50 – 60Hz or 120 - 370VDC	
	Recommended Breaker	6A	
Output:	DC Voltage	24VDC / 6.3A	48VDC / 3.2A
	Voltage Adj. Range	±10%	±10%
LED Indicators:	DC output: Green		
Environment:	Operating Temperature	-40°C to 40°C Full Load 40°C to 60°C Derating Curve Applies	
	Humidity	5%~95% RH, Non-condensing	
Safety & EMC:	Standards	UL 508, CSA 22.2 CE EN 60950	

Contact

By Mail:	Att: Sales RLH Industries, Inc. 936 N. Main St. Orange, CA 92867	
By Phone: Sales / Service Mon - Fri, 6am - 6pm, PST	Local	714-532-1672
	Toll Free	800-877-1672
		866-DO-FIBER
By Email:	info@fiberopticlink.com	
By FAX:	714-532-1885	

Tech Support

By Email:	support@fiberopticlink.com		
By Phone:	Toll Free	855-754-2497	
		855-RLH-24X7	