

## USER GUIDE

### 48VDC 1.2Ah DIN Mount Battery Pack

#### Ideal for Temporary Backup for DIN-Mounted Electronics

The 1.2Ah 48VDC battery pack is an ideal battery solution suited for 48VDC UPS applications, or other industrial applications where battery reserve power is required.

The aluminum powder coated housing includes a pluggable screw down terminal, and an externally accessible fuse for easy installation and maintenance. This battery pack mounts on standard T35 DIN rail and has dual clips for extra stability on the rail.

The four internal batteries are maintenance free, AGM sealed lead acid, and rated for up to 5 years of standby service. Spent batteries are easily replaced in the field and replacement battery sets are readily available.

RLH offers a variety of compatible DIN rail power supplies and charge controllers to complete your battery backup solution.

#### Key Features

- Includes dual DIN clips for extra stability
- DIN mountable
- Powder coated aluminum construction
- Easy to access pluggable screw down terminal
- Ideal solution for 48VDC battery backup applications
- Externally accessible replaceable fuse
- Includes sealed, maintenance free, lead acid batteries with AGM technology
- Up to 5 years of standby service

#### Ordering Information

Description	Part Number
48V 1.2Ah UPS Backup Battery Pack w/fuse and DIN mount	RLH-4801-2BP
Replacement Battery Set For RLH-4801-2BP	RLH-4801-RB



48VDC 1.2Ah DIN Mount Battery Pack



Output Terminal and Fuse Holder

### **DIN Mounting**


Prior to installation:

- Check for shipping damage
- Check the contents to ensure correct model and capacity
- Have a clean, dry installation environment ready

Required for installation:

- DIN rail for DIN mounting

Attach the battery pack to the DIN rail by engaging the bottom of the DIN clips onto the rail first, then push up slightly while rotating the top onto the rail. Check to make sure that the battery pack is securely mounted onto the DIN rail.

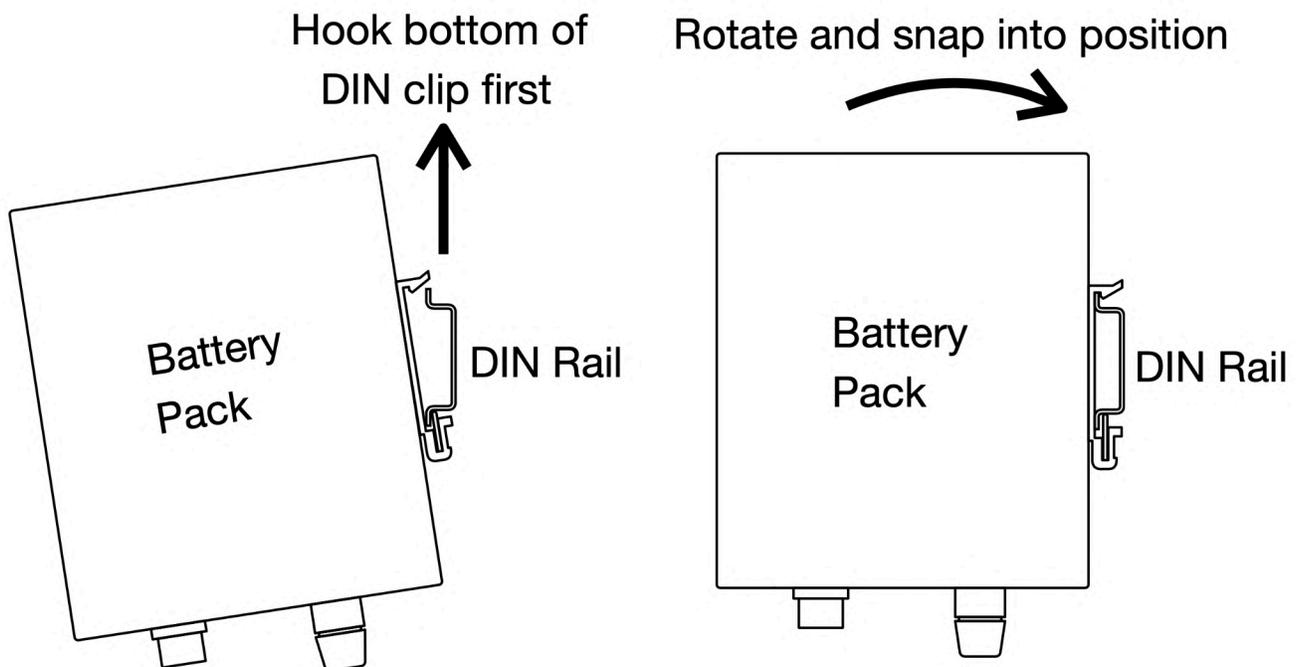

## Charging & Discharging



### Charging:

RLH's recommended charging voltage assumes that the charging voltage will be set to a fixed voltage and the batteries will be used across the entire operational temperature. The recommended set point ensures that the batteries do not receive an excessive charge in warm environments.

Most industrial power supplies will include a voltage adjustment feature. When adjusting the power supply voltage set point, ensure there is no load on the power supply. A multimeter should be used to ensure the power supplies DC output voltage is correctly set to the recommended charging voltage.

### Discharging:

Ensuring the batteries do not over discharge is key to long term battery life. The number of cycles a sealed lead acid battery can support varies based on the depth of discharge. It is recommended to use a charge controller with a low voltage disconnect feature to help prolong the life of the batteries.

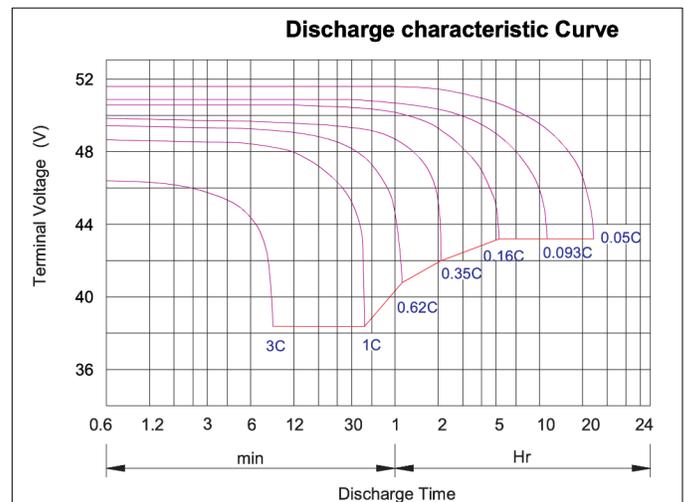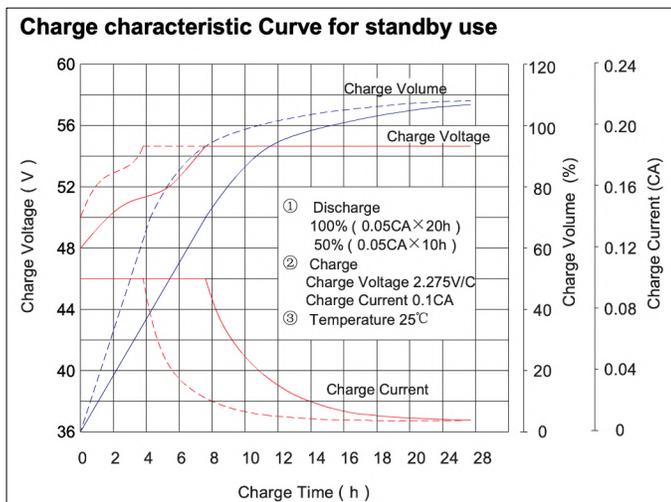

## USER GUIDE

### Key Specifications

<b>Battery Pack Construction:</b>	Powder Coated Aluminum
<b>Dimensions:</b>	10.38" (W) x 3.58" (D) x 5.64" (H), (264mm x 91mm x 144mm)
<b>Mounting:</b>	DIN Clip for T35 DIN Rail
<b>Power Connection:</b>	Screw down power terminals
<b>Weight:</b>	7 lbs. (3.2kg)
<b>Internal Batteries:</b>	Quantity 4, 12VDC, 1.2Ah
<b>Battery Type:</b>	Lead acid deep cycle AGM, spill proof, maintenance free
<b>Nominal Voltage:</b>	48VDC
<b>Capacity:</b>	1.2Ah @ 25°C
<b>Included Fuse:</b>	6A, user replaceable
<b>Operating Temperature Range:</b>	Discharge: -20°C ~ 60°C (-4°F ~ 140°F) Charge: 0°C ~ 50°C (32°F ~ 122°F) Storage: -20°C ~ 60°C (-4°F ~ 140°F) *Extreme temperatures will reduce the storage time as well as the life of the batteries.
<b>Recommended Charging Voltage:</b>	52.6VDC
<b>Recommended Charging Current Limit:</b>	0.12A
<b>Maximum Recommended Charging Current Limit:</b>	0.36A
<b>Self Discharge:</b>	Charge the batteries at least once every six months, if they are stored at 25°C (77°F)

**USER GUIDE**[www.fiberopticlink.com](http://www.fiberopticlink.com)**Contact**

---

By Mail:	Att: Sales RLH Industries, Inc. 936 N. Main St. Orange, CA 92867
----------	---

---

By Phone: Sales / Service Mon - Fri, 6am - 6pm, PST	Local	714-532-1672
	Toll Free	800-877-1672 866-DO-FIBER

---

By Email:	<a href="mailto:info@fiberopticlink.com">info@fiberopticlink.com</a>
-----------	--

---

By FAX:	714-532-1885
---------	--------------

**Tech Support**

---

By Email:	<a href="mailto:support@fiberopticlink.com">support@fiberopticlink.com</a>
-----------	--

---

By Phone:	Toll Free	855-754-2497 855-RLH-24X7
-----------	-----------	------------------------------