

USER GUIDE

www.fiberopticlink.com

UG-M080 2025-01-15

4 Channel 0~10VDC Fiber Converter

Transmit four 0~10VDC Analog Signals over Fiber with High Speed and Accuracy

This Fiber Optic Media converter transmits 4 Analog signals over fiber cable. Offers high end specifications: 78,000 samples a second, 16 bit signal resolution, and less than 0.2% source signal variance.

Compatible with most PLC's, Sensors (2, 3, or 4 wire), and other types of equipment where a precise current or voltage measurement must be taken and transmitted over fiber. The system comprises of a transmitter (Analog Input) and a receiver (Analog Output), each device is enclosed in a compact DIN and wall mountable housing.

This compact and rugged system provides convenient and easy to read LEDs, supports both single-mode and multimode fiber applications, and includes an alarm on either side monitoring system power and fiber health. Designed to operate over an extreme temperature range, providing reliability in harsh environments. Designed and Made in the USA and covered by our Limited Lifetime Warranty.

Key Features

- Rugged design – Extreme operating temperature rating
- Convenient LEDs for power, fiber, and analog signals
- Single and dual fiber models available
- Available with ST or SC connectors & single or multimode fiber
- Update rate: 78,000 samples a second
- 16 Bit Signal Resolution
- 99.8% Accuracy or Better
- Alarm contact for status monitoring
- Redundant Power Inputs
- Built-in surge, over current, and polarity reversal protection
- DIN rail or wall mount (Includes wall mount ears)
- Limited Lifetime Warranty
- Made in USA



4 Channel 0~10VDC Fiber Converter (transmitter shown)



Complete System with Transmitter and Receiver

USER GUIDE

www.fiberopticlink.com




General Safety Practices

The equipment discussed in this document may require tools designed for the purpose being described. RLH recommends that service personnel be familiar with the correct handling and use of any installation equipment used, and follow all safety precautions including the use of protective personal equipment as required.

CAUTION - SEVERE SHOCK HAZZARD

- Never install during a lightning storm or where unsafe high voltages are present
- Use caution when handling copper wiring and follow appropriate safety regulations

Guidelines for Handling Terminated Fiber Cable

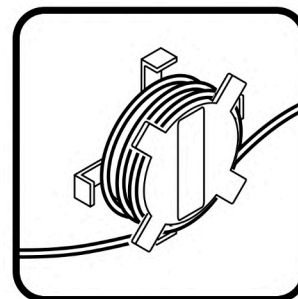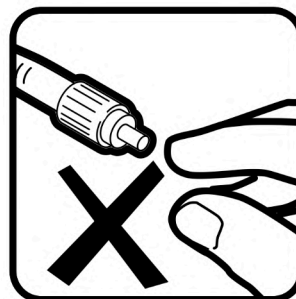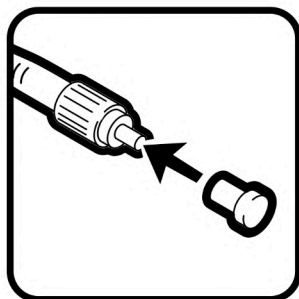

- Do not bend fiber cable sharply; use gradual and smooth bends to avoid damaging glass fiber
- Keep dust caps on fiber optic connectors at all times when disconnected
- Do not remove dust caps from unused fiber
- Keep fiber ends and fiber connectors clean and free from dust, dirt and debris; contamination will cause signal loss
- Do not touch fiber ends
- Store excess fiber on housing spools or fiber spools at site

Commonly Used Acronyms & Abbreviations

Name	Description
TX	Transmit
RX	Receive
PWR	Power
NC	Normally Closed
Com	Common
NO	Normally Open
TRX	0~10VDC Transmitter
RCV	0~10VDC Input/Receiver
Sinking	Does not provide signal voltage or current, expects the voltage and current to be present on the signal line
Sourcing	Provides signal voltage and current

USER GUIDE


www.fiberopticlink.com

Applications

By utilizing fiber optic cable, the 0~10VDC system provides absolute electrical isolation between both ends of the control system. It provides immunity to EMI/RF interference, ground loops, and high voltage surges from lightning or ground faults, and is ideal in electrically noisy environments such as near large power sources, electrical motors, and radio communications equipment. Fiber optic cable also allows for a signal transmission of up to 120km over fiber optic cable from the source signals location.

Control equipment in high voltage areas can be at risk due to Ground Potential Rise (GPR). A copper network cable referenced to a remote ground can become a path for high voltages during a ground fault. Placement of all-dielectric fiber optic cable (instead of copper) completely eliminates the presence of a remote ground, which dramatically increases signal accuracy, reliability of equipment, and safety of personnel.


System Diagram

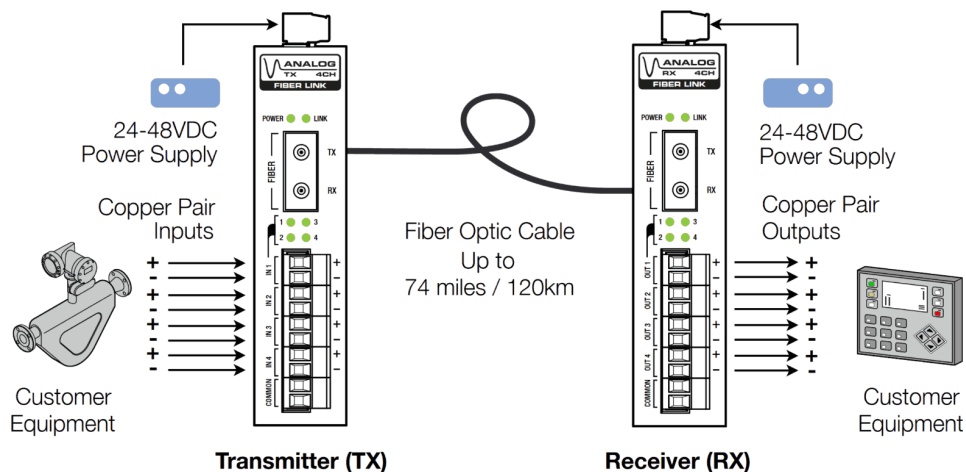

Applications (cont'd)

0~10VDC System – 3-Wire Transmitter Wiring


Connecting a 3-Wire Transmitter to a RLH Transmitter (ADH-010TX-XX-1). The RLH transmitter is always a sinking input, expecting the source voltage to be supplied by the remote device. The common terminal should be used when multiple 3-Wire transmitters are connected to the RLH Fiber Link Transmitter. Below is a typical configuration for 3-wire transmitters.

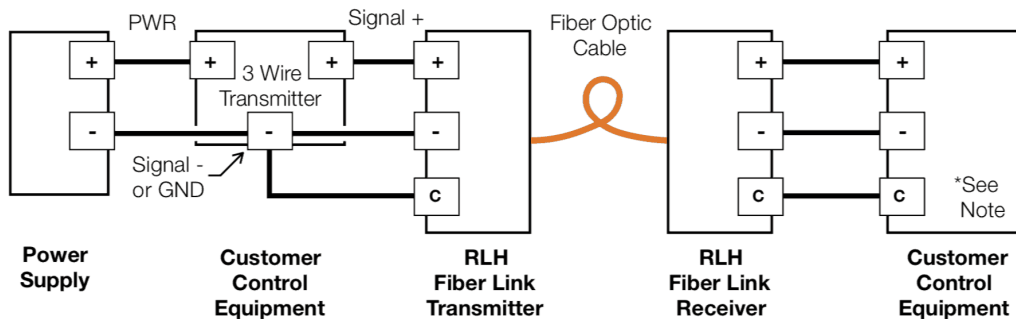

Note: Use common terminal when connecting RLH receiver to differential inputs

0~10VDC System – 4-Wire Transmitter Wiring

Connecting a 4-Wire Transmitter to a RLH Transmitter (ADH-010TX-XX-1). The RLH transmitter is always a sinking input, expecting the source voltage to be supplied by the remote device. Below is a typical configuration for a 4-Wire transmitter.

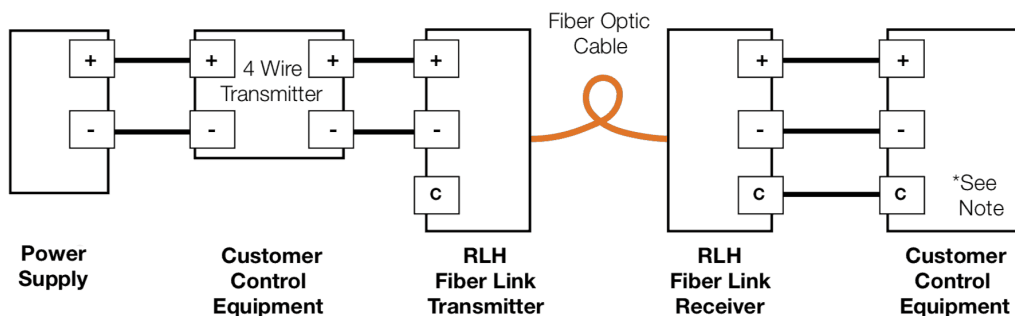

Note: Use common terminal when connecting RLH receiver to differential inputs

USER GUIDE

www.fiberopticlink.com

Installation

Prior to installation:


- Check for shipping damage
- Check the contents to ensure correct model and fiber type
- Have a clean, dry installation environment ready
- Ensure that the fiber type at the site matches the system type

Required for installation:

- 24VDC power source at both installation sites
- DIN rail for mounting or wall space for wall mounting
- Multimeter
- Measure the DC voltage of the source power to ensure that it is 24VDC

Front Panel

The front panel contains the input or output contact terminals, LED's, and the TX or RX fiber port.

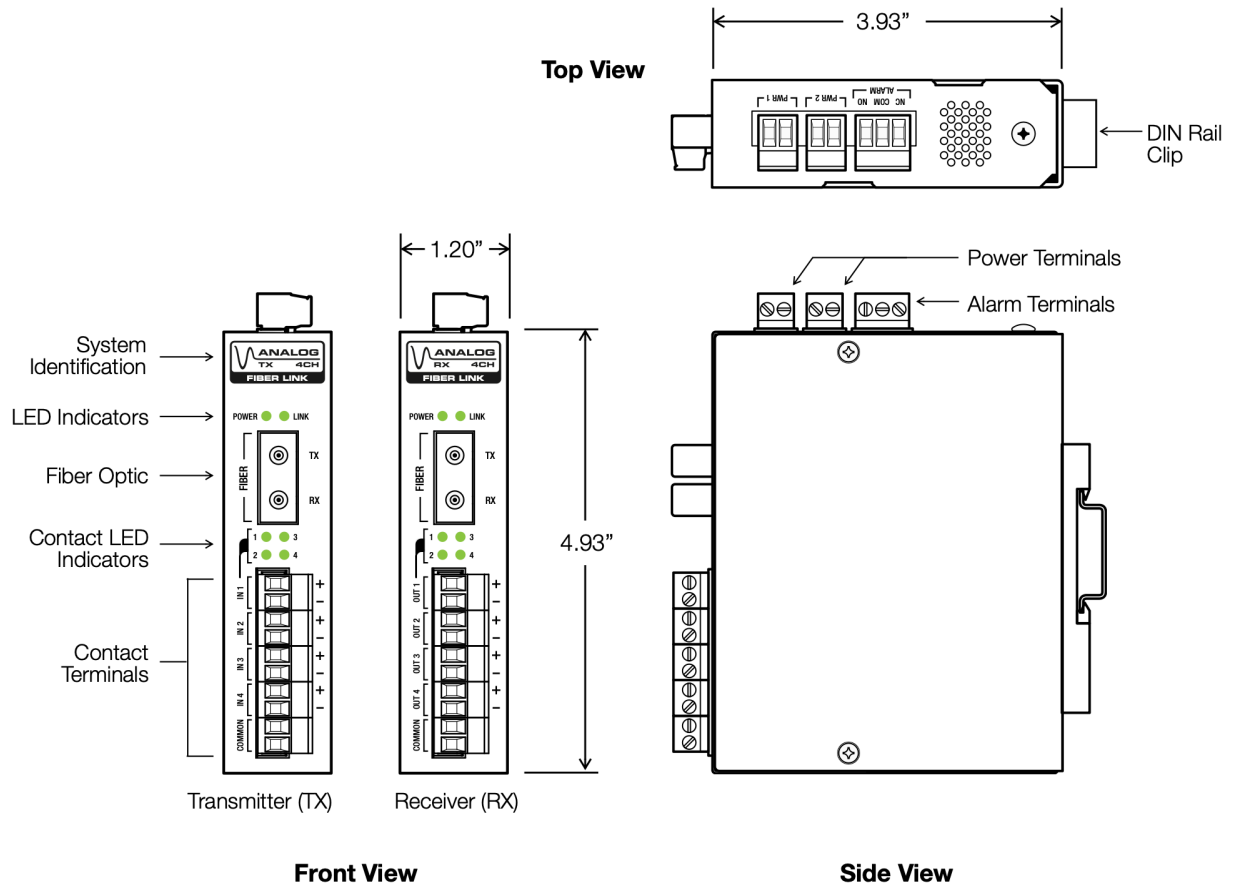


USER GUIDE

www.fiberopticlink.com


Installation (cont'd)

DIN Rail Mounting

The DIN clip for mounting the system is mounted onto the rear panel. Hook the DIN clip on the top flange of the DIN rail and rotate to the locked position to install. To remove, push up to depress the spring latch and rotate off of the DIN rail.

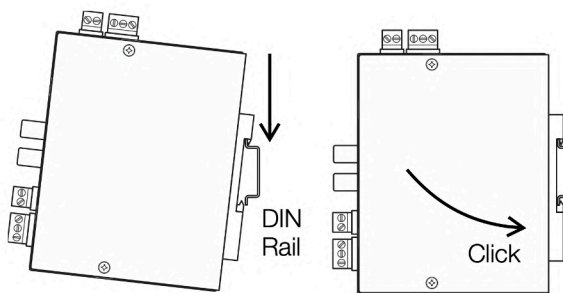


Installation

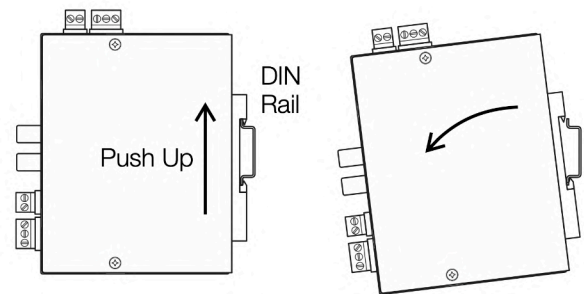

Removal

Wall Mounting

The system can be easily wall mounted by attaching the provided wall mount ears and hardware. Attach the wall mount ears by following the instructions below.

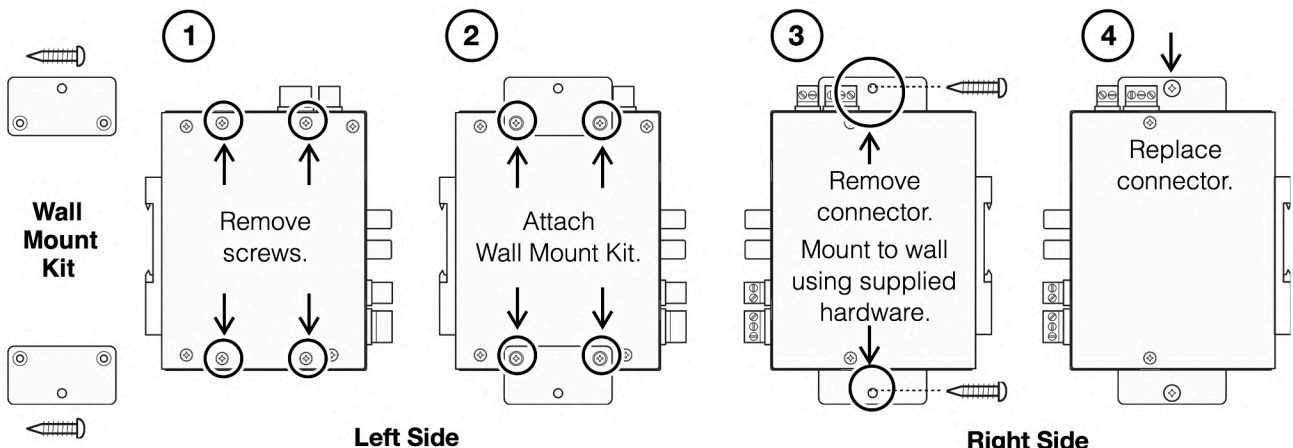

Installation (cont'd)

Connect Fiber Optic Cable

Connect fiber to the transmit and receive optical connectors on the front of the units. Fiber cable should always be routed loosely avoiding tight bends.

- For dual fiber systems connect the TX fiber port to the RX fiber port at the remote side
- For single fiber systems ensure Side A is connected to Side B. Two side A devices will not pair together, the same applies to side B; single fiber systems will always have a Side A & B
- Once the system is properly connected the Link LED, on the receiver unit, should turn ON

Connect Copper Wire Pairs

The wire pairs from the sensor or controller equipment connect to the green screw-down terminals on the transmitter and receiver modules labeled Input and Output.

- Observe polarity on the input and output connectors
- The contact terminals may be removed and accept wire sizes 16~26 AWG
- Fully seat the terminal block back into the connector before operating the system
- When using 3-Wire devices ensure common terminals are connected

Receiver Alarm Contact Wiring

The contact will alarm when the fiber link is down or a power failure.


- Use the NO or NC contact positions as required
- The alarm terminal block may be removed and accept wire sizes 16~26 AWG
- Fully seat the terminal block back into the connector before operating the system
- An alarm terminal is present on both the Transmitter and Receiver

Connect Power

Ensure power supply is OFF prior to wiring the system. Each device has redundant power input terminals. Connect a 24VDC power supply to the screw-down terminals labeled PWR1 or PWR2 located on the top of the unit. Either pair of terminals or both may be used to power the device.

- Requires one (1) 24VDC power supply on each side of the system
- Fully seat the terminal block back into the connector before operating the system

Note: Power input is NOT polarity sensitive

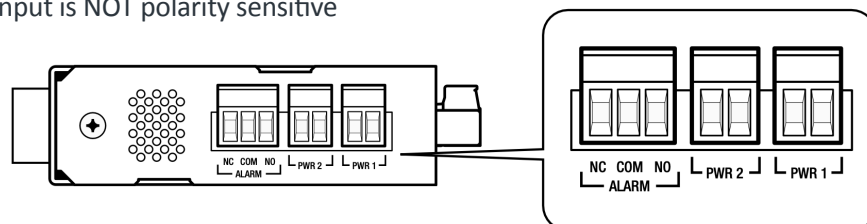


Top View of Power & RX Alarm Terminals

USER GUIDE

www.fiberopticlink.com

Installation (cont'd)

LED Identification

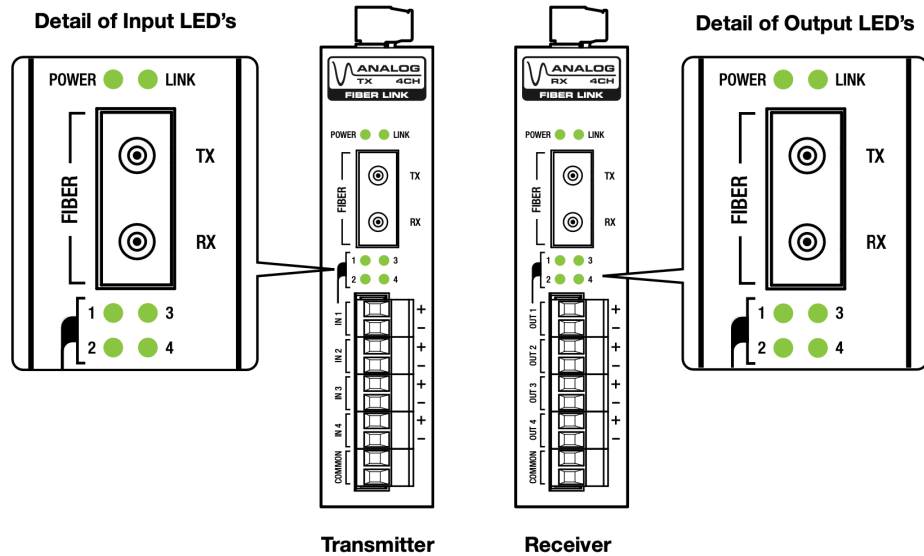

Analog Signal Fiber Link System

LED	Name	Status	Condition
Power	Power Failure	ON OFF	DC input power OK DC input power failed
Link	System Link	ON OFF	Fiber link OK Fiber link failed
Input	0~10VDC Input	ON OFF Blinking	Signal present No signal present Signal over range
Output	0~10VDC Output	ON OFF Blinking	Signal present No signal present Signal over range

Troubleshooting

If trouble is encountered, verify all copper and fiber connections, signal and voltage levels. If the alarm is on, check the fiber cable and connections, or the other units power source and connections. If trouble persists, contact RLH Industries, Inc. technical support department*.

*Tech support contact info is at the end of this document

USER GUIDE

www.fiberopticlink.com

Ordering Information

Transmitter/Receiver	Mode	Connector	Fibers	Distance	Part Number
Transmitter	Multimode	SC	Dual Fiber	2km/1.2 miles	ADH-010TX-03-1
Receiver	Multimode	SC	Dual Fiber	2km/1.2 miles	ADH-010RX-03-1
Transmitter	Multimode	ST	Dual Fiber	2km/1.2 miles	ADH-010TX-04-1
Receiver	Multimode	ST	Dual Fiber	2km/1.2 miles	ADH-010RX-04-1
Transmitter	Singlemode	SC	Dual Fiber	20km/12.4 miles	ADH-010TX-40-1
Receiver	Singlemode	SC	Dual Fiber	20km/12.4 miles	ADH-010RX-40-1
Transmitter	Singlemode	SC	Dual Fiber	60km/37 miles	ADH-010TX-41-1
Receiver	Singlemode	SC	Dual Fiber	60km/37 miles	ADH-010RX-41-1
Transmitter	Singlemode	SC	Dual Fiber	120km/74 miles	ADH-010TX-45-1
Receiver	Singlemode	SC	Dual Fiber	120km/74 miles	ADH-010RX-45-1
Transmitter	Singlemode	ST	Dual Fiber	20km/12.4 miles	ADH-010TX-50-1
Receiver	Singlemode	ST	Dual Fiber	20km/12.4 miles	ADH-010RX-50-1
Transmitter	Singlemode	ST	Dual Fiber	60km/37 miles	ADH-010TX-51-1
Receiver	Singlemode	ST	Dual Fiber	60km/37 miles	ADH-010RX-51-1
Transmitter	Singlemode	ST	Dual Fiber	120km/74 miles	ADH-010TX-55-1
Receiver	Singlemode	ST	Dual Fiber	120km/74 miles	ADH-010RX-55-1
Transmitter	Singlemode	SC	Single Fiber - Side A	20km/12.4 miles	ADH-010TX-10-1
Receiver	Singlemode	SC	Single Fiber - Side B	20km/12.4 miles	ADH-010RX-11-1
Transmitter	Singlemode	SC	Single Fiber - Side A	60km/37 miles	ADH-010TX-14-1
Receiver	Singlemode	SC	Single Fiber - Side B	60km/37 miles	ADH-010RX-15-1

- A complete system requires a transmitter unit and a receiver unit

USER GUIDE

www.fiberopticlink.com

Key Specifications

Transmission Method:	Frequency modulated light via a single optical fiber	
	Multimode:	1310nm
	Singlemode:	1310nm/1550nm
Maximum Fiber Attenuation/Distance:	Dual Fiber:	Multimode (50µm & 62.5/125µm): 2km/1.2 miles range Singlemode (9/125µm): 20km/12.4 miles range 60km/37 miles range 120km/74 miles range
	Single Fiber, Bi-Directional:	Singlemode (9/125µm): 20km/12.4 miles range 60km/37 miles range
Note: Distances equated using industry standard fiber and connector attenuation. Fiber condition, splices, and connectors may affect actual range.		
Connector Type:	ST or SC connectors	
System Accuracy:	99.8%	
	Note: Accuracy for Fiber Link System, Both Transmitter & Receiver at 25°C and powered by 24VDC	
	Ambient Temp Effect:	Approximately 0.4% over range -40°F to +158°F
	Update Rate:	12.8µs (78,000 updates per second)
	Signal Resolution:	16 Bits
	Sensitivity:	2 ¹⁶ (65,536) Steps
Analog Inputs 1~4: (differential inputs)	Operating Range:	0~10VDC
	Impedance:	200K Ohms
	Protection:	24VDC
Analog Output 1~4: (single-ended, unipolar)	Maximum Loop Resistance:	1000 Ohms
	Maximum Output Signal:	10.6VDC
Power Requirements:	24~48VDC, 8 Watts maximum transmitter, 10 Watts maximum receiver Dual redundant power inputs	
Wire Connector:	Screw clamp terminal blocks, 16~26 AWG	
DC Input Isolation:	1.5KV	
Surge Protection:	PTC thermistors, zener diodes and varistors	
Over Current Protection:	0.5A (Automatic Recovery)	
Operating Temperature:	-40°C to +70°C (-40°F to +158°F), 95% non-condensing	
Dimensions:	1.2" (W) x 3.91" (D) x 4.93" (H), (31mm x 100mm x 126mm) *Not including connectors	
Warranty:	Limited Lifetime	

USER GUIDE

www.fiberopticlink.com

Contact

By Mail:	Att: Sales RLH Industries, Inc. 936 N. Main St. Orange, CA 92867	
By Phone: Sales / Service Mon - Fri, 6am - 6pm, PST	Local	714-532-1672
	Toll Free	800-877-1672 866-DO-FIBER
By Email:	info@fiberopticlink.com	
By FAX:	714-532-1885	

Tech Support

By Email:	support@fiberopticlink.com	
By Phone:	Toll Free	855-754-2497 855-RLH-24X7